Magellan RoadMate 1200 Speaker Replacement

Written By: Ross Light



INTRODUCTION

The speaker can be easily removed from the back cover.

TOOLS:

- Phillips #00 Screwdriver (1)

© iFixit — CC BY-NC-SA

Step 1 — Back Cover





- Remove 4 rubber caps covering each screw by inserting the screwdriver into the side of cap and prying back and forth.

ⓘ Please note: this is a tedious process, but be patient.

Step 2



- Remove the 4 screws holding the cover in place using a Philips #00 screwdriver.

© iFixit — CC BY-NC-SA

Step 3



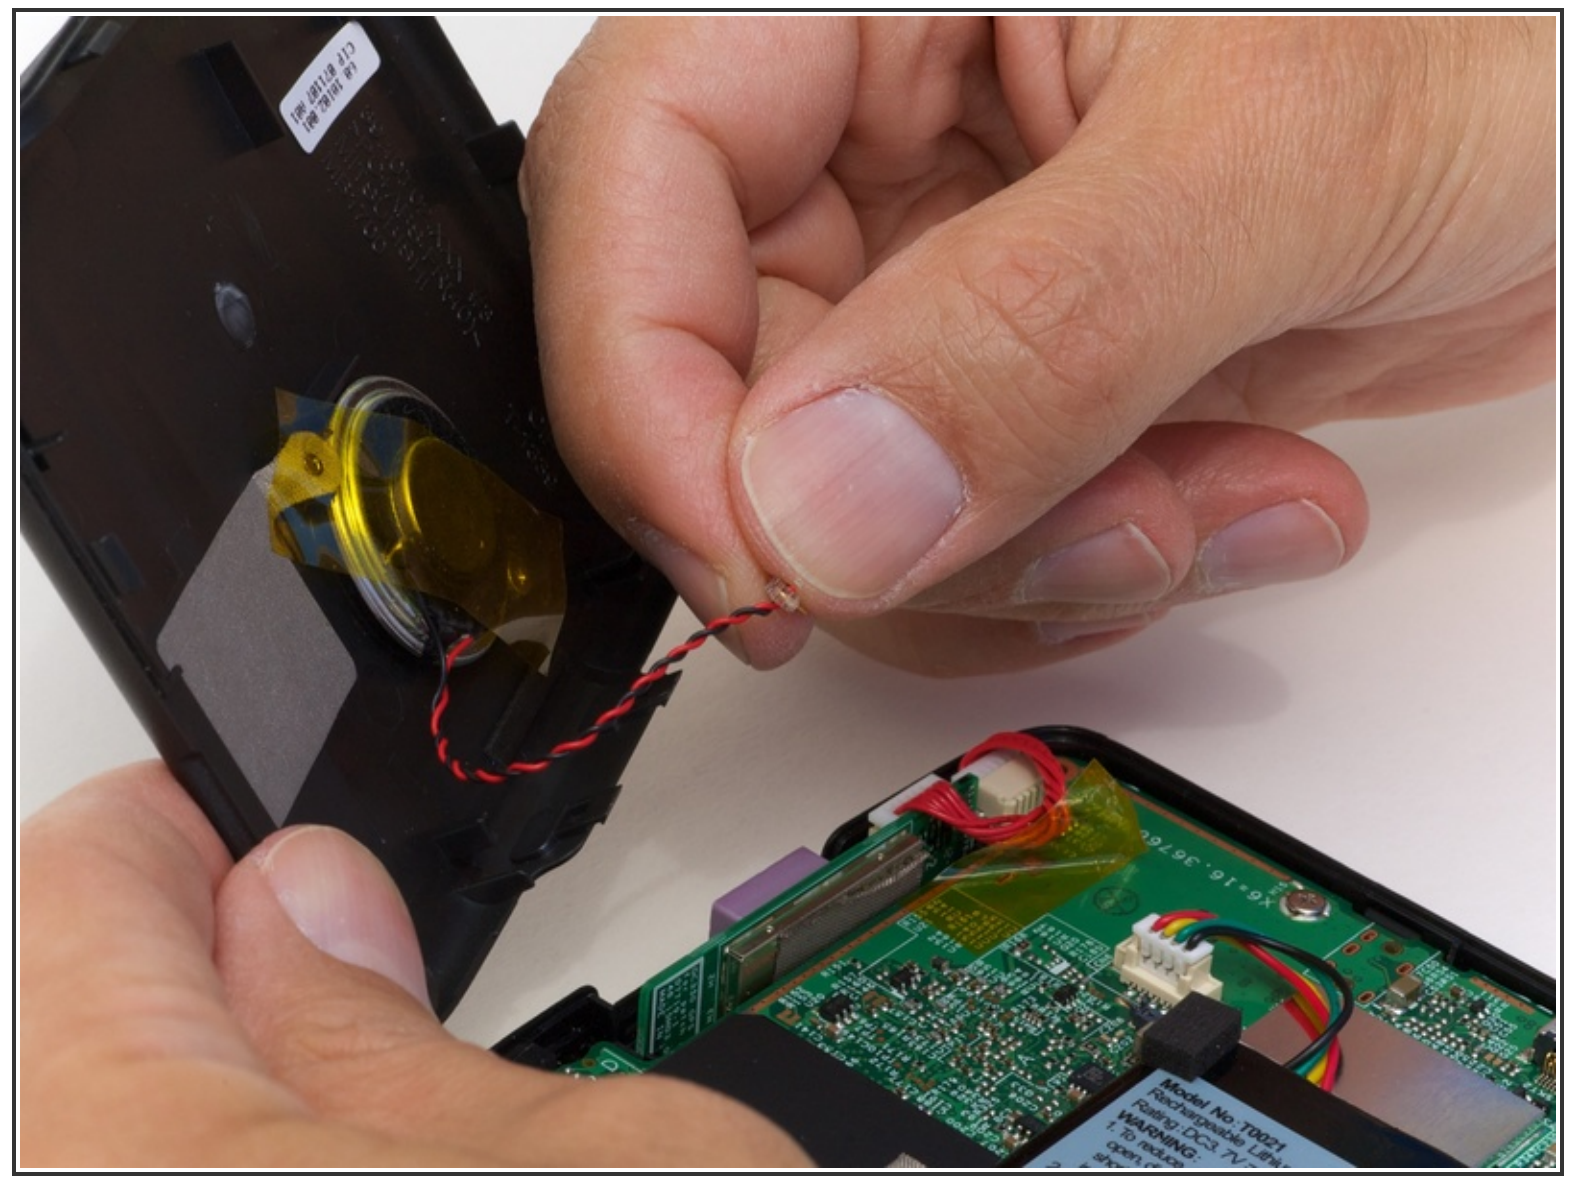


- Open the back cover.

⚠ Lift the cover slowly and carefully; the speaker is screwed on the back cover and is connected to the circuit board.

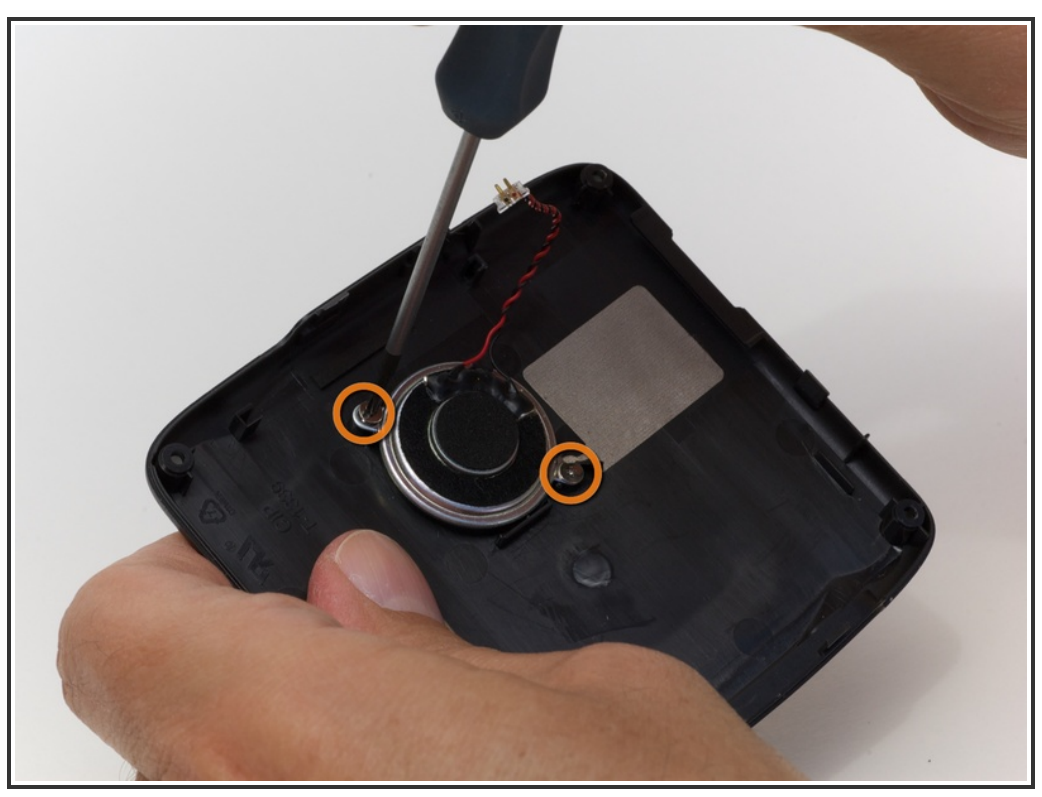
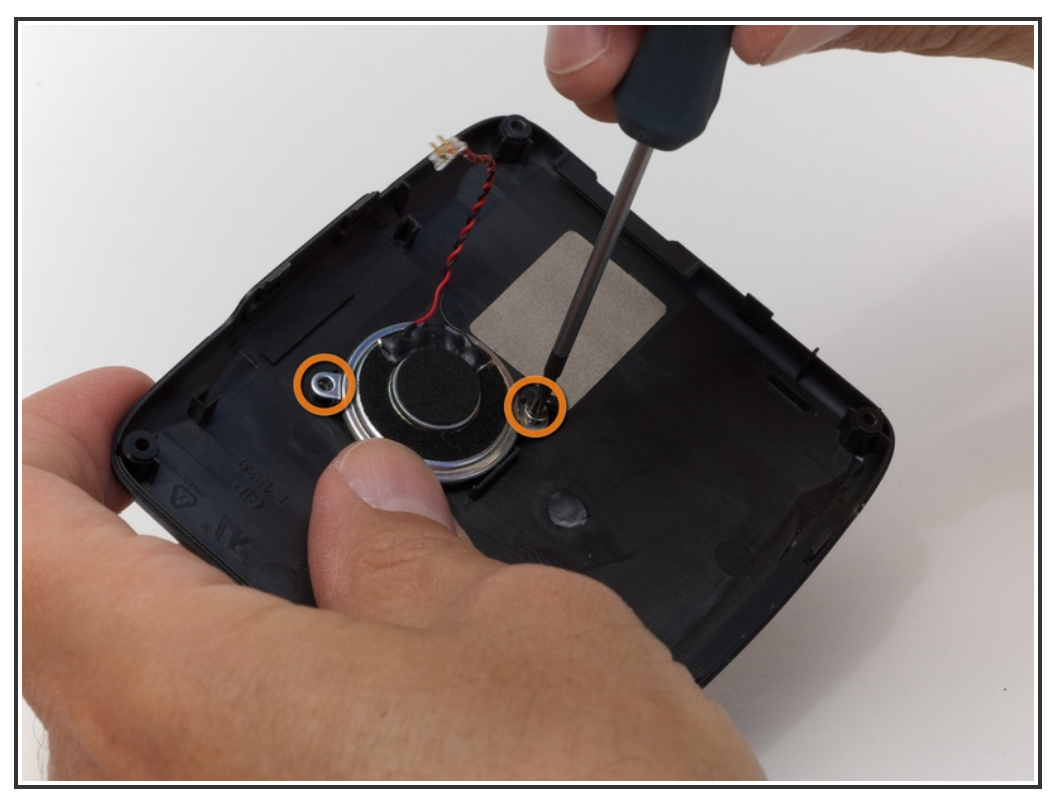
© iFixit — CC BY-NC-SA

Step 4

- Disconnect the speaker from the terminal.
- When reassembling, make sure that you plug the terminal in the same way. The black wire should be on the side farthest from the battery.

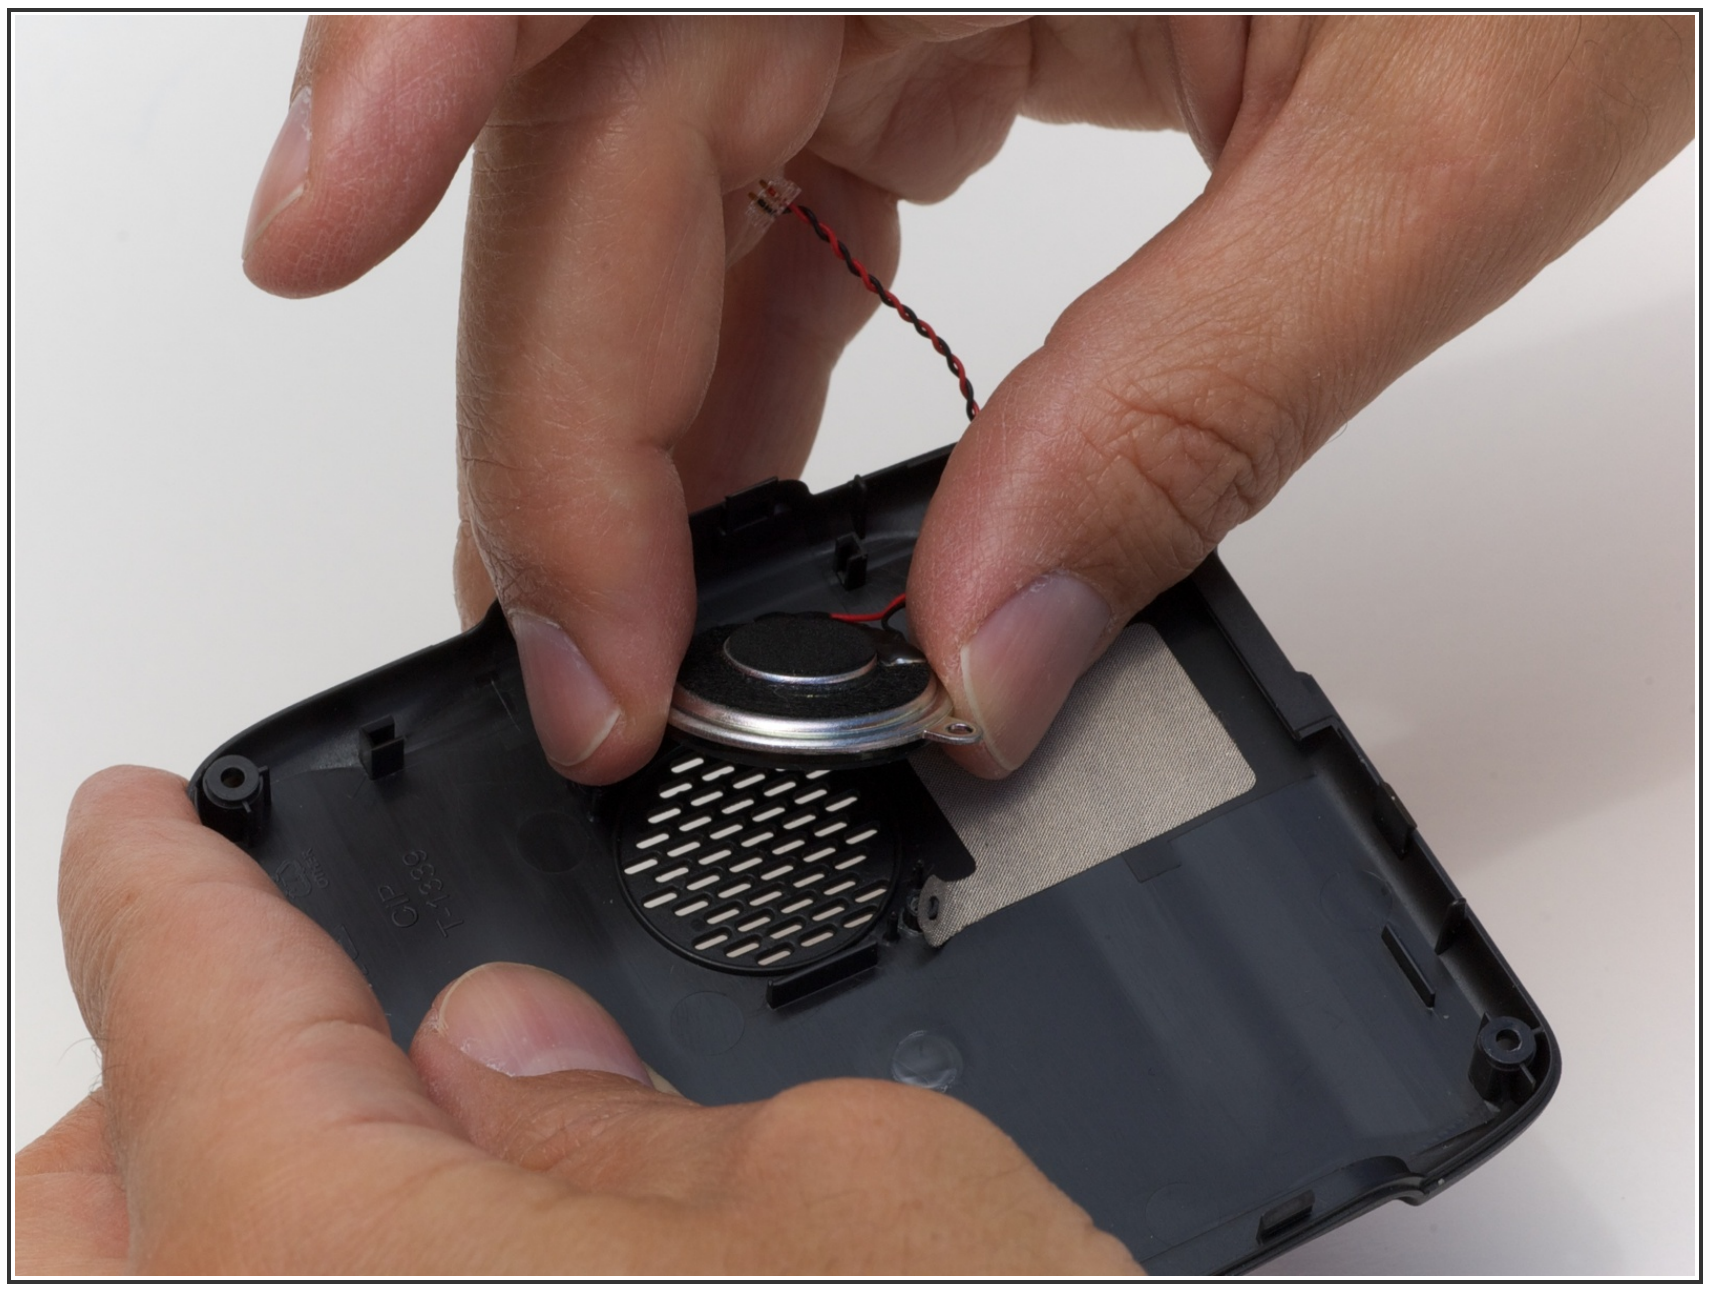
Step 5 — Speaker

- Once you pull off the back cover, remove the orange piece of tape on the speaker.
- Use a Philips #00 screwdriver to remove the 2 screws holding the speaker to the back casing.

© iFixit — CC BY-NC-SA

Step 6



- Once the speaker has been unscrewed, remove the speaker from the back casing with your fingers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 11:20:06 AM.